1. Select an appropriate Master Flash® Multi. If necesary trim opening to the pipe diameter.
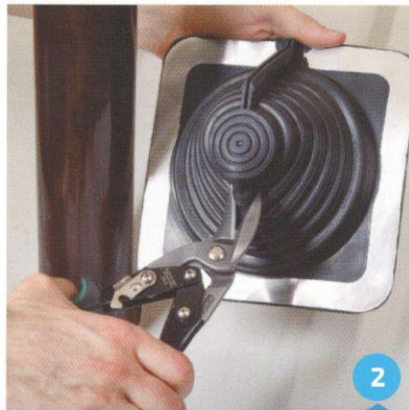
2. Apply Master Flash® Multi by sliding it down the pipe or cut it on the side to use as Retrofit.
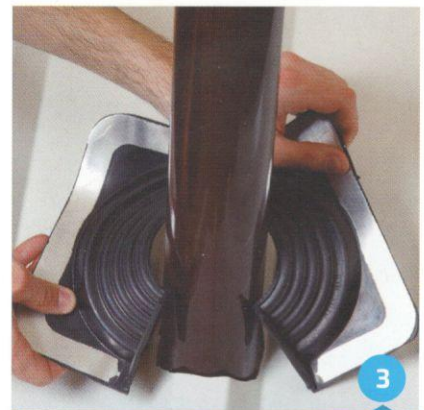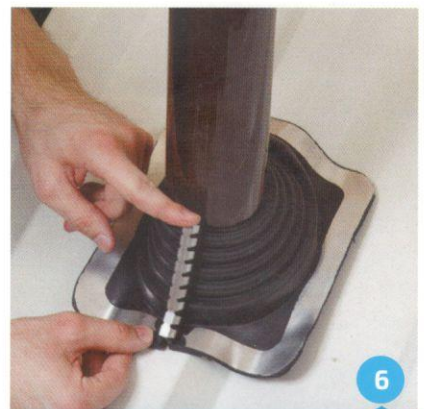

3. Wrap Master Flash® Multi around the pipe.

4. Press Master Flash® Multi down, bending it to conform to roof profile or roof irregularities. A blunt tool will help press the flashing into tight roof angles.
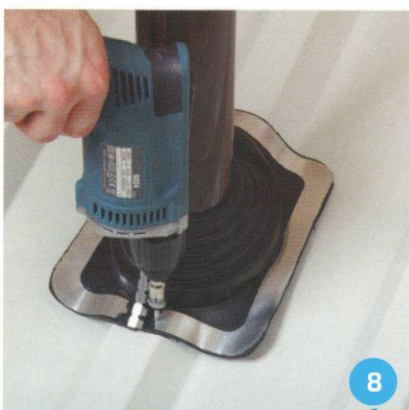

5. Apply sealant between the base, roof and at the top of the flange.

6. Use stainless steel clamp to close the Master Flash® Multi.

7. Tighten the stainless steel clamp.

8. Use fasteners to complete sealing. For installation, fastener spacing may not exceed 1.5" (38 mm).

9. Additional sealant may be applied between the flashing and the pipe.